








This is intended for consultation and does not replace the Use and Maintenance Manual. Before using the machine, read the **Use and Maintenance Manual** contained in the machine packaging thoroughly and rigorously respect all the instructions.

## OPERATION INSTRUCTIONS



Fill the detergent tank

Adjust the angle of the handle by pulling the handle release lever

Lower the squeegee using the lever

Open the detergent tank tap

Press the ON button

Press the brush button to activate suction and water delivery

Squeeze the drive lever and begin working

**When you finish cleaning, proceed as follows:**

1.) Press the brush button. 2.) Turn the machine off by pressing the ON button for at least 4 seconds. 3.) Raise the squeegee. 4.) Close the detergent tank tap. 5.) If necessary, charge the batteries (battery version).

## DAILY MAINTENANCE



Empty the dirty water tank

Make sure the dirty water tank float is undamaged, clean and moves freely on the pin

Make sure the squeegee is clean and the blades are not damaged

Empty and rinse the dirty water tank

Remove and clean the brush

Check the battery charge level (battery version)

To recharge the batteries, plug in the battery charger (optional) using the extension cord provided

### Replacing Squeegee Blades

- release the clip;
- remove the two blade retainers by pushing them toward the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centering the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inward;
- fasten the clip.

### Replacing Brushes

**Attaching:** insert the brushes under the head, making sure they rest against the alignment bracket. Hold the automatic brush attachment button down until they are attached.






**Releasing:** lift the head using the lift button, then press the release button.

### Troubleshooting

Brush motor will not start	• Check brush motor fuse (see check motor fuses below)
The machine does not come on/start up	• Confirm the emergency button is not pressed • Check the battery charge level
The suction motor does not work	• Confirm the dirty water tank is not full • Confirm the dirty water tank level sensor is not blocked/malfunctioning
The machine leaves the floor wet	• Ensure the squeegee blades are not worn • Ensure there is no debris between the two squeegee blades • Ensure there is no debris in the suction hose • Verify the suction filter is undamaged and clean
The machine leaves the floor dirty	• Verify the type of brush/pad/microfiber in use is suitable for the type of dirt and floor
The machine leaves stripes of wet floor	• Ensure the floor has been swept before using the machine • Ensure there is no debris between the two squeegee blades • Ensure the squeegee blades are not worn • Ensure the squeegee is correctly adjusted

Other possible reason the brush will not turn: The brush motor thermal cutout has tripped; the motor overheated - remedy is to release the brush lever, press the brush button (LED off), leave the machine to cool down for at least 45 minutes.

## CHECKING MOTOR FUSES



Drain the recovery tank. Remove the recovery tank by lifting up.

Locate the 20 amp brush motorfuse.

Remove the brush motor fuse.

Check the fuse to see if it is blown by looking in the fusewindow. If the metal wire is present and not broken, the fuse is good. If the metal wire is missing or broken, the fuse is bad and needs to be replaced with a new 20 amp fuse.

Install a good 20 amp fuse and reattach the fuse cover. Replace the recovery tank back on and test brush motor.