

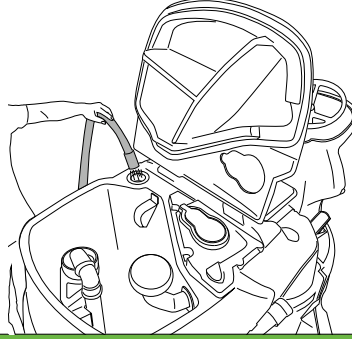
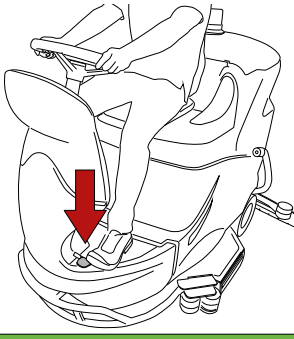





CT230 Quick guide

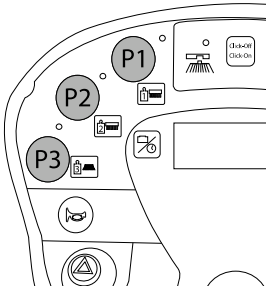



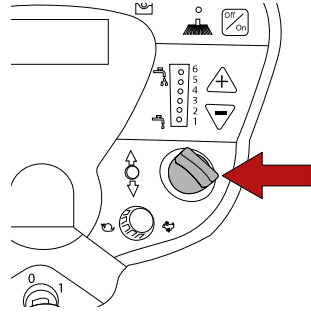




This guide is intended for quick consultation only and does not replace the user and maintenance manual. Before using the machine, read the user and maintenance manual contained in the machine's packaging thoroughly and strictly follow all the instructions.

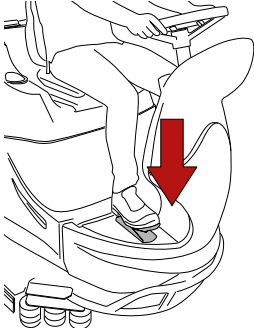
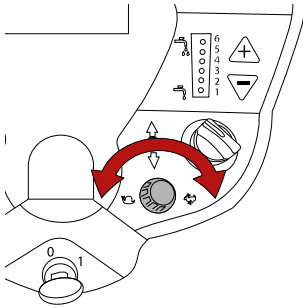
PREPARATION & OPERATION


1  2  3 

H₂O + CHEM |  | 

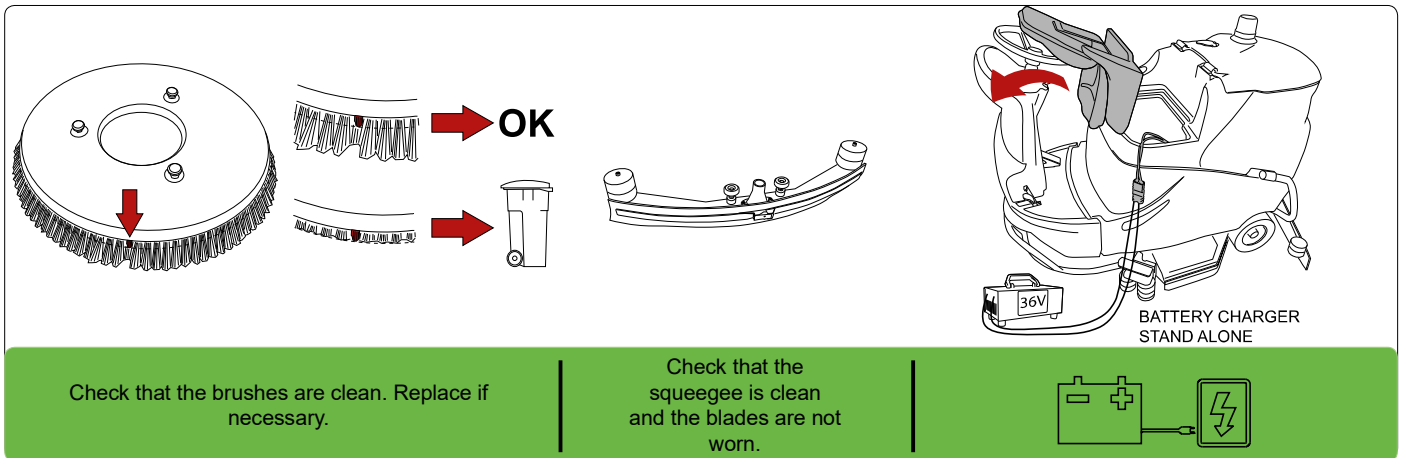
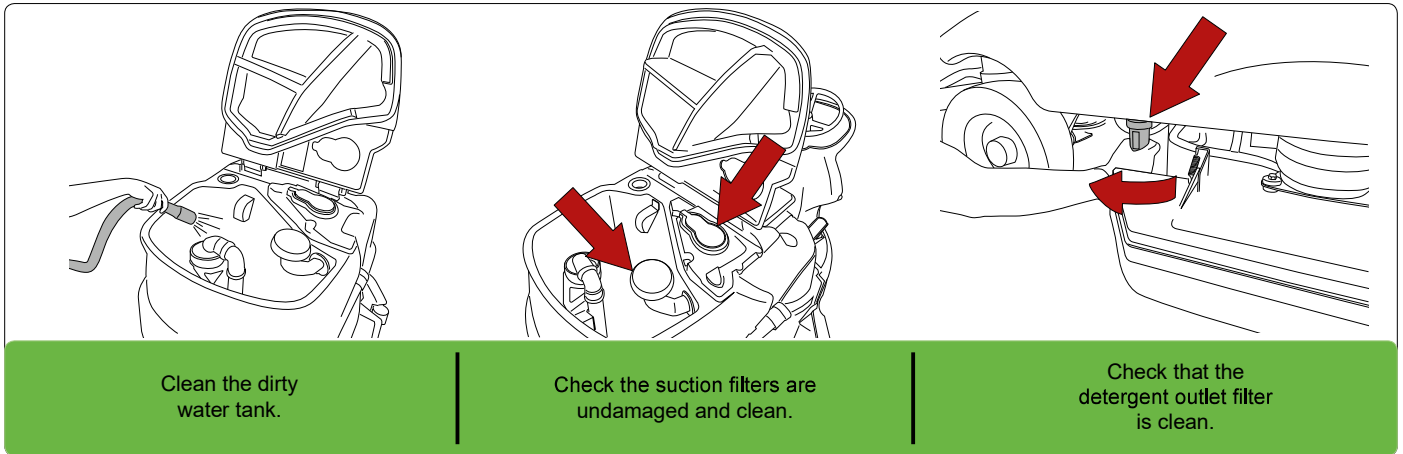
4  P1  P2  P3  5 

 | 

6  7 

 | 

DAILY MAINTENANCE



REPLACING THE SQUEEGEE BLADES

unscrew the wing nuts fixing the blade retainer;
 remove the blade retainer;
 remove the blade;
 put the same blade back, reversing the edge in contact with the floor, or replace with a new one;
 reposition the blade retainer and fix the wing nuts back;

ATTACHING/REMOVING THE BRUSHES

Attaching:
 Press the "Click-Off-On" button. The machine first performs a release operation, then immediately afterwards enables the attachment operation. Press the "Click-Off-On" button again to automatically attach the brushes.

Releasing:
 Press the "Click-Off-On" button, the machine releases the brushes.

