





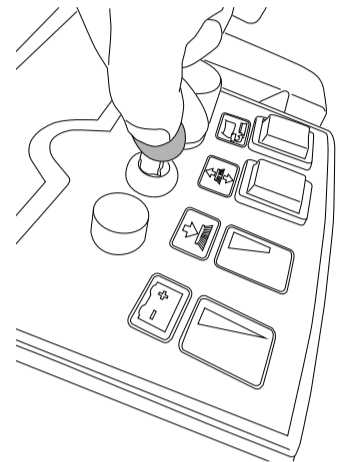

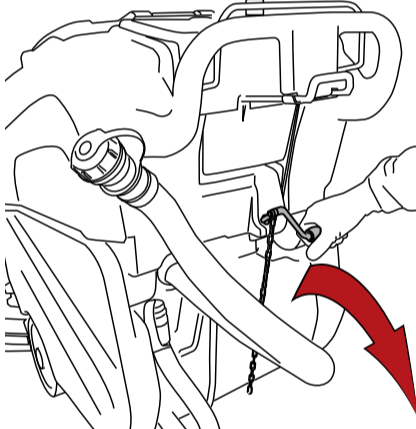

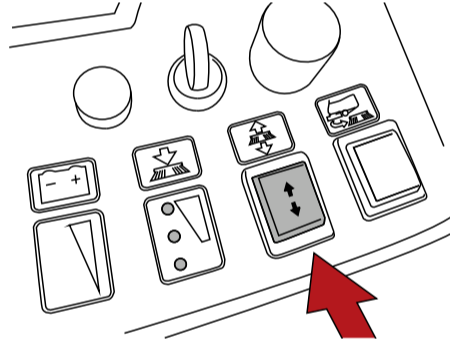

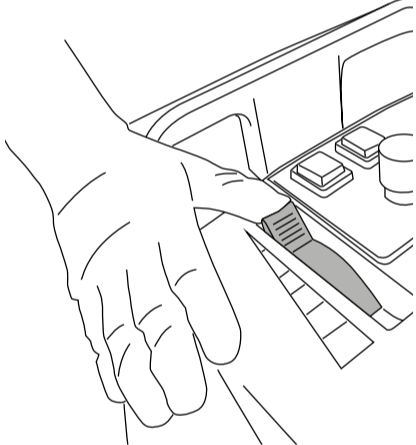

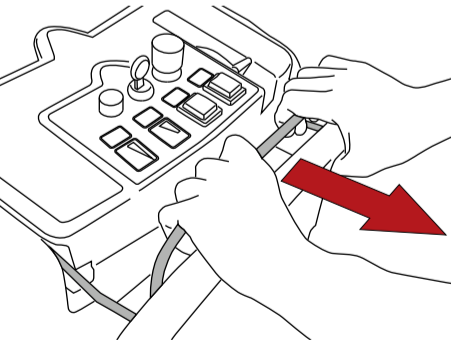
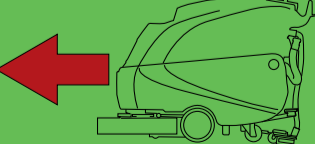
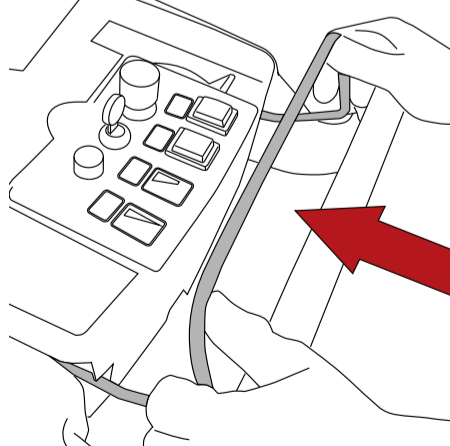
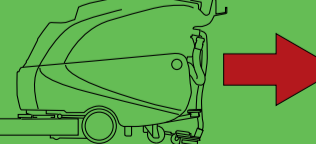
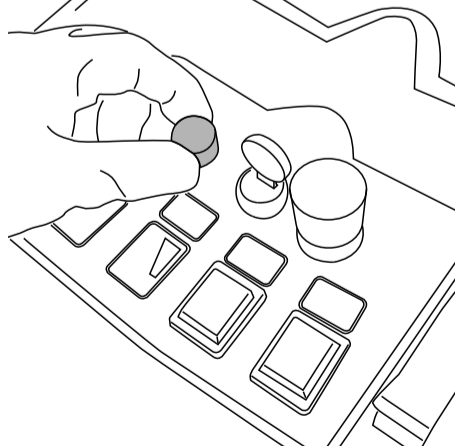
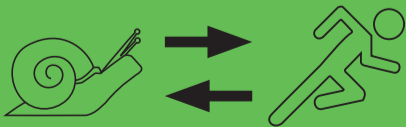


# CT105 Quick guide




This guide is intended for quick consultation only and does not replace the user and maintenance manual. Before using the machine, read the user and maintenance manual contained in the machine's packaging thoroughly and strictly follow all the instructions.

## PREPARATION & OPERATION
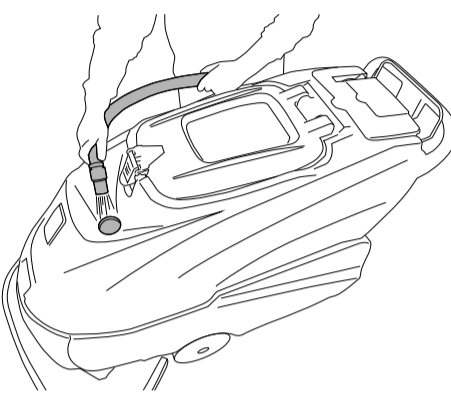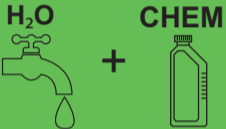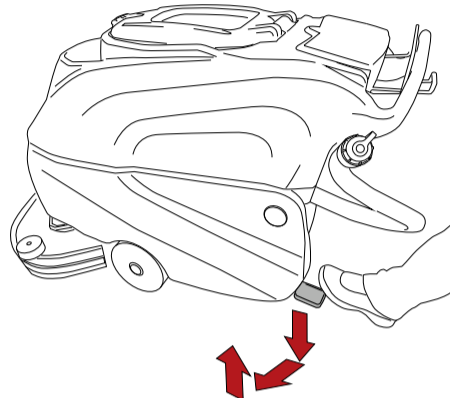
<p>1</p>  <p>H<sub>2</sub>O + CHEM</p> 	<p>2</p>  <p><del>P</del></p> 	<p>3</p>  <p>ON</p> 
<p>4</p>  <p></p>	<p>5</p>  <p></p>	<p>6</p>  <p></p>
<p>7</p>  <p></p>	<p>8</p>  <p></p>	<p>9</p>  <p></p>


## DAILY MAINTENANCE

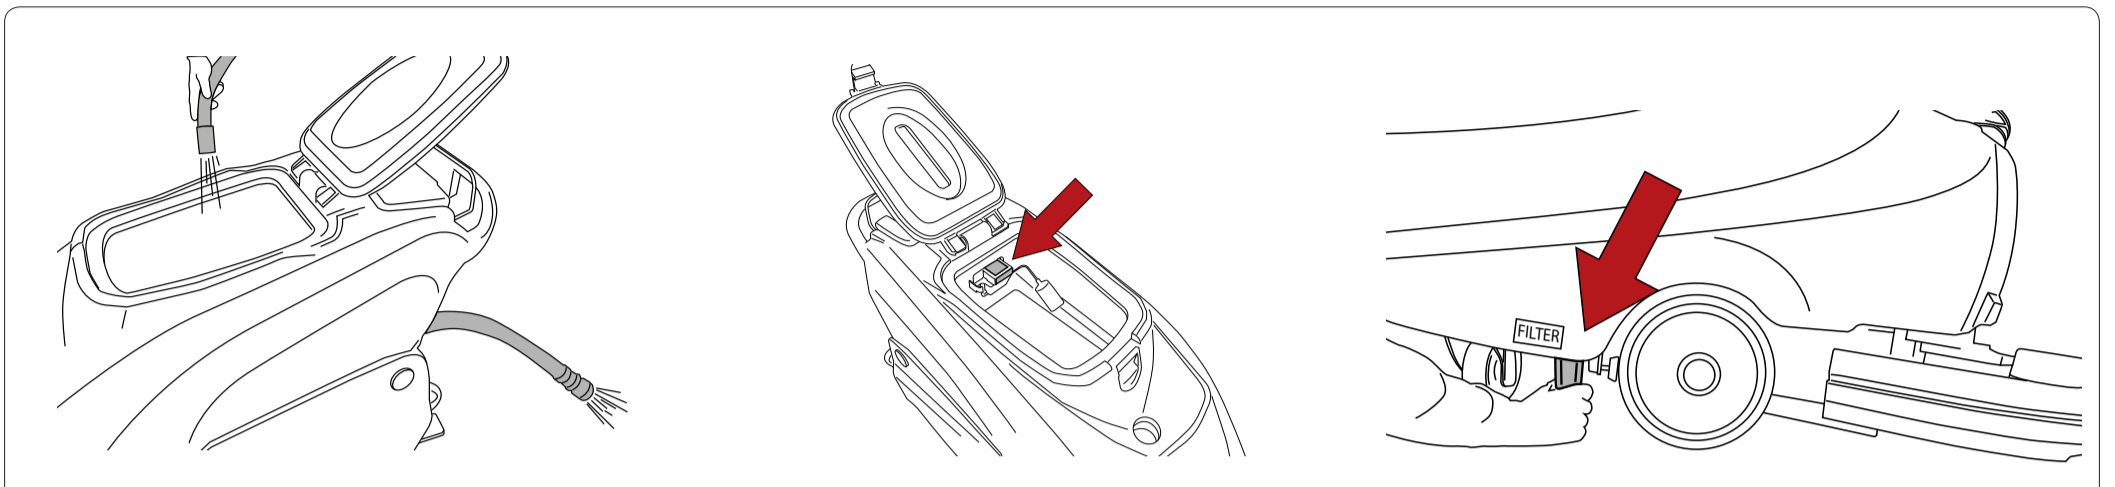

Clean the dirty water tank.

Check the suction filter is undamaged and clean.

Check that the detergent outlet filter is clean.

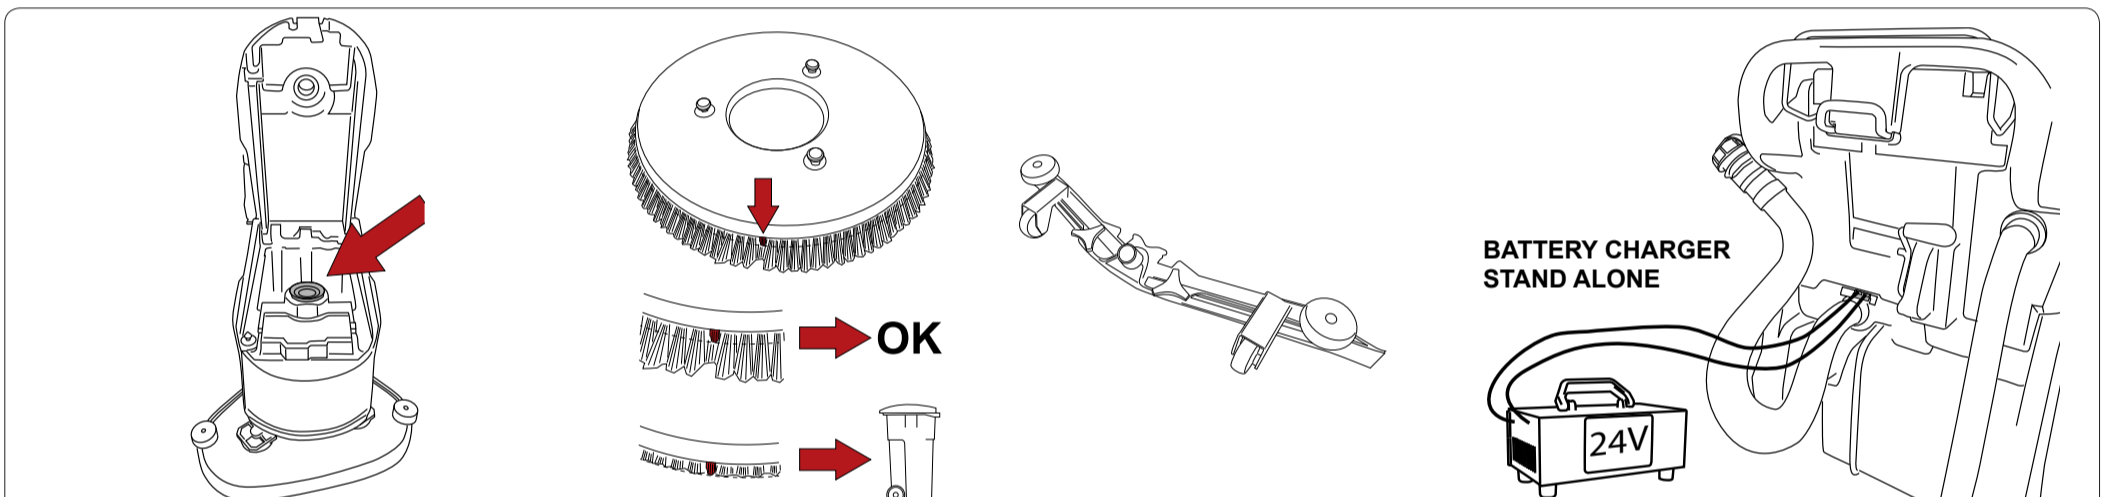


Check the detergent tank fill filter is undamaged and clean.

Check that the brushes are clean. Replace if necessary.


Check that the squeegee is clean and the blades are not worn.

BATTERY CHARGER STAND ALONE




## REPLACING THE SQUEEGEE BLADES

Open the clip (Ref. 1).  
 Remove the two blade retainers (Ref. 2) by pushing them outwards then extracting them.  
 Remove the blade.  
 Reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee.  
 Reposition the two blade pressing devices by centering the wider part of the slots on the squeegee body fastening pins, then push the blade pressing devices inwards.  
 Close the hook again.  
 Replace the squeegee on its support, following the instructions described previously.

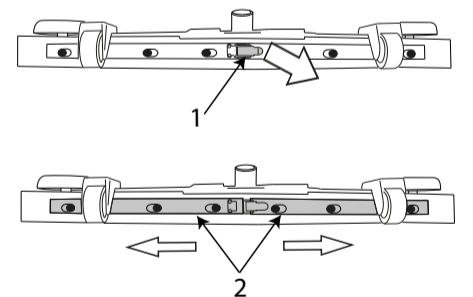

## ATTACHING/REMOVING THE BRUSHES

**Attaching:**  
 insert the brushes under the head, making sure they rest against the aligners. Hold the button down to lower the head until the brushes are engaged.

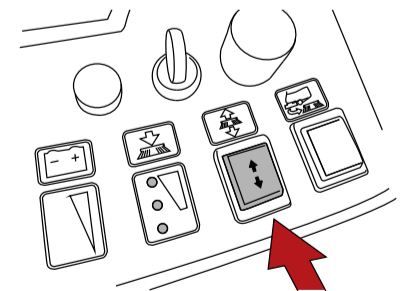

**Releasing:**  
 lift the head using the lift button, then press the release button.

